

## Resetting Factory Settings

1. Press the House Button
2. Press DIS/+ button
  - a. Inner Window Shows – Set
  - b. Outer Window Shows - Up
3. Press House Button Twice
  - a. Inner Window Shows – POS
  - b. Outer Windows Shows - ### (a number)
4. Rotate the balancer shaft until the machine shows
  - a. Inner Window Shows – POS
  - b. Outer Windows Shows – 111
5. Press “C” Button
6. Rotate the balancer shaft until the machine shows
  - a. Inner Window Shows – POS
  - b. Outer Windows Shows – 55
7. Rotate the balancer shaft until the machine shows
  - a. Inner Window Shows – POS
  - b. Outer Windows Shows – 111
8. Press "C" button
  - a. Inner Window Shows – COD
  - b. Outer Window Shows - Set
9. Press House Button
  - a. Inner Window Shows - ## (a Number)
  - b. Outer Window Shows – 29 – this number is not an issue
10. Use the DIS+ / DIS- Button to change the number in the Outer Window to 46
11. Press the House Button
  - a. Inner Window Shows – “B-A”
  - b. Outer Window Shows – ### (a Number)
12. Pull the Distance Gauge out to measure the distance from the machine to the back of the flange on the wheel balancer hub. Note this distance.
13. Use the DIS+ / DIS- Button to change the number in the Outer Window to to match the distance from the machine to the flange.
14. Press the House Button
  - a. Inner Window Shows – “EL1”
  - b. Outer Window Shows – ### (a Number)
15. Use the DIS+ / DIS- Button to change the number in the Outer Window to 007.
16. Press the House Button
  - a. Inner Window Shows – “Tur”
  - b. Outer Window Shows – “Off”
17. Press the House Button, the machine will beep three times and flash the information below on the screen.
  - a. Inner Window Shows – “SAV”

b. Outer Window Shows – “Dat”  
18. The Factory Settings have been reset.